



Morco D61B & D61E

A full range of Morco spares are available to order.


Gas valve & burner assembly

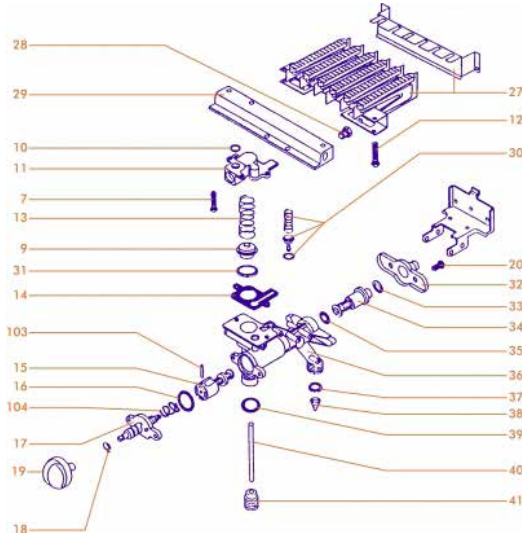


External components

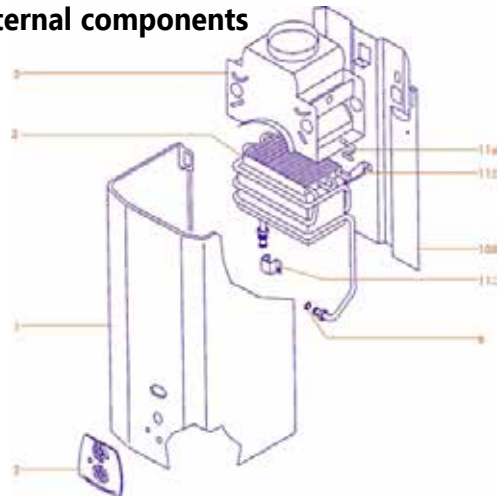

Water control assembly - 070709

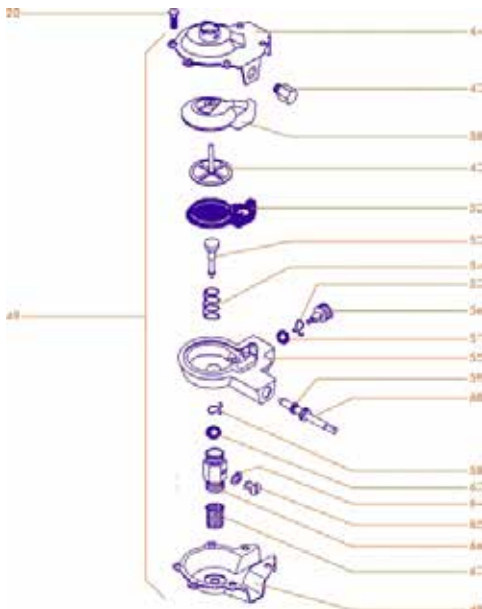

Pilot assembly

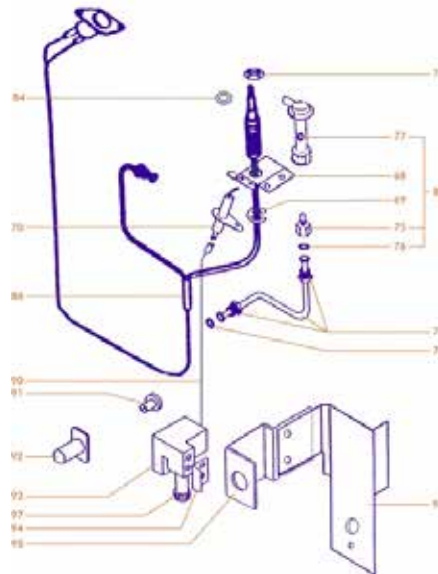


No.	Description	Morco	Grove
1	Front cover	D61B FW0006 D61E FW0007	
2	Bezel white	D61B FW0019 D61E FW0020	
3	Heat exchanger	FW0033	
5	Diverter hood	FW0044	
6	Heat exch washer (10pk)	FW0530	
7	Screw (10pk)	FW0560	
9	Main gas valve disc (5pk)	FW0405	
10	Burner bar cork washer (5pk)	FW0531	
11	Gas assembly cover	FW0065	
12	Screw (10pk)	FW0561	
13	Main valve spring (5pk)	FW0396	
14	Top cover gasket (10pk)	FW0533	
15	Gas valve spindle assembly	FW0075	
16	Gas valve spindle O-ring (10pk)	FW0534	
17	Piezo spindle assy	FW0085	
18	Water assy inlet union clip (5pk)	FW0563	
19	Control Knob white	D61B FW0096 D61E FW0097	
20	Screw (10pk)	FW0562	
27	Main burner	FW0115	
28	Main burner injectors LPG (6pk)	FW0126	
29	Burner bar c/w injectors	FW0135	
30	Pilot valve kit	FW0341	
31	Valve disc seal (10pk)	FW0536	
32	Magnetic valve cover plate	FW0410	
33	Brass washer (10pk)	FW0537	
34	Magnetic valve	FW0350	
35	Mag valve seal (10pk)	FW0538	
36	Main gas housing	FW0151	
37	3/4" washer (10pk)	FW0539	070721
38	Gas filter (2pk)	FW0355	
39	Gas valve rod O-ring (10pk)	FW0540	
40	Gas valve push rod (5pk)	FW0360	

41	Push rod guide screw	FW0365	
43	Push rod & disc	FW0415	
47	Front cover hex nut	FW0426	
48	Lower cover plate	FW0435	
49	Water control assembly	FW0163	070709
50	Upper protector	FW0170	
51	Outlet union O-ring (10pk)	FW0595	070720
52	Diaphragm	FW0180	070711
53	Water regulator	FW0193	
54	Water reg spring (10pk)	FW0200	
55	Lower protector	FW0214	070712
56	Water assy outlet union	FW0221	
57	Water assy out union clip (5pk)	FW0564	
58	Water assy in union clip (5pk)	FW0563	
59	Water ctrl spindle O-ring (10pk)	FW0542	070722
63	Inlet union O-ring (10pk)	FW0543	070723
64	Drain plug washer old (10pk)	FW0544	070724
	Drain plug washer new (10pk)	FW0597	070727
65	Drain plug	FW0251	070714
66	Water assy inlet union	FW0260	
67	Water filters (5pk)	FW0271	070716
68	Pilot bracket	FW0281	
69	Thermocouple locking nut (10pk)	FW0566	
70	Spark electrode	FW0291	
71	Thermocouple locking nut (10pk)	FW0566	
73	Pilot gas pipe	FW0310	070718
74	Pilot jet washer (10pk)	FW0545	070725
75	Pilot injector LPG	FW0321	
76	Pilot washer (10pk)	FW0545	070725
77	Pilot burner	FW0330	
80	Pilot burner kit		
	Includes 68, 69, 75, 76 & 77	FW0320	070719
86	Thermocouple complete	FW0301	070717
103	Roll pin (10pk)	FW0567	
104	Gas spindle spring (5pk)	FW0568	
108	Base	FW0058	
113	Fixing clamp	FW0495	
116	Heat exch spring clip	FW0512	
	Water pipe washer (10pk)	FW0547	070726
	Flue terminal	FTFT250	070728
	Flue Pipe	FTPWDS420	070730


Morco G11E/G111E

A full range of Morco spares are available to order.


Gas valve & burner assembly

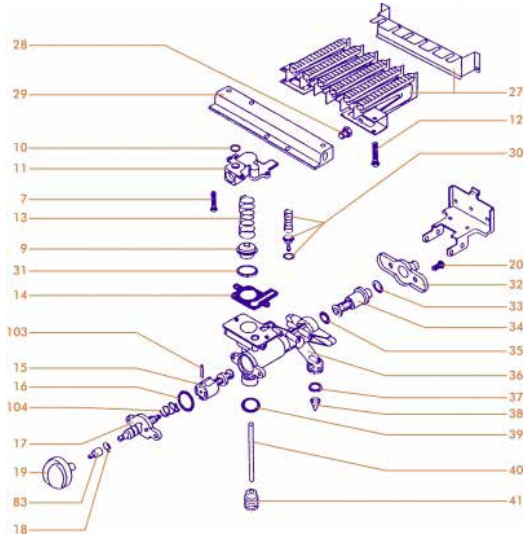


External components

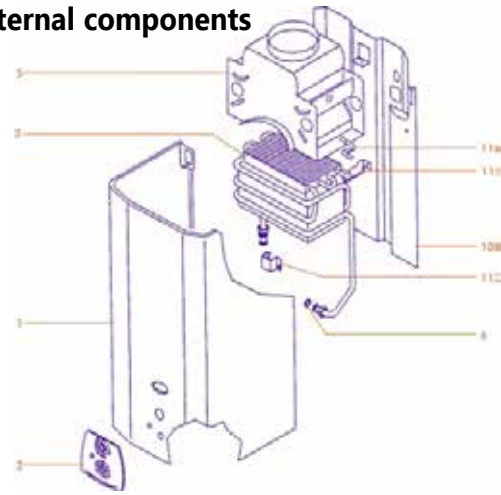

Pilot assembly

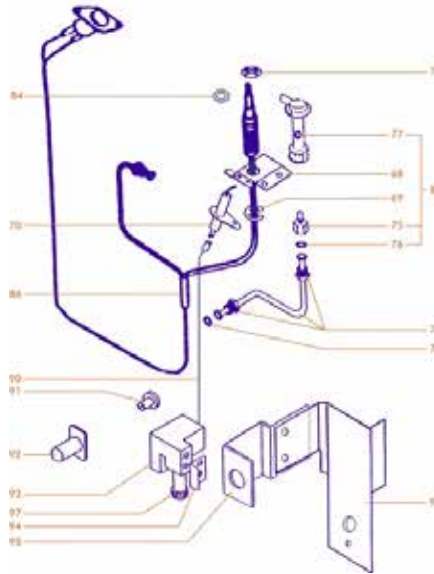

Water control assembly

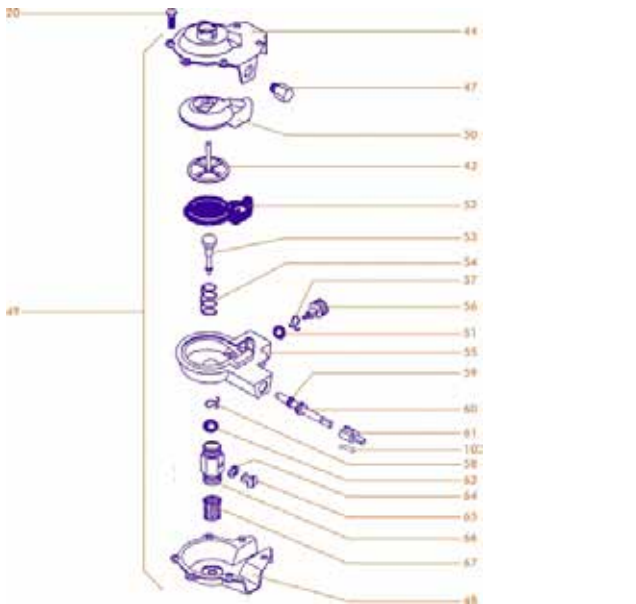

No.	Description	Morco	Grove
1	Front cover	FW0005	
2	Bezel white D61B	FW0018	
3	Heat exchanger	FW0032	
6	Heat exch washer (10pk)	FW0530	
7	Screw (10pk)	FW0560	
9	Main gas valve disc (5pk)	FW0405	
10	Burner bar cork washer (5pk)	FW0531	
11	Gas assembly cover	FW0066	
12	Screw (10pk)	FW0561	
13	Main valve spring (5pk)	FW0396	
14	Top cover gasket (10pk)	FW0533	
15	Gas valve spindle assembly	FW0075	
16	Gas valve spindle O-ring (10pk)	FW0534	
17	Piezo spindle assy	FW0085	
18	Water assy inlet union clip (5pk)	FW0563	
19	Control Knob white	FW0097	
20	Screw (10pk)	FW0562	
27	Main burner	FW0113	
28	Main burner injectors LPG (6pk)	FW0126	
29	Burner bar c/w injectors	FW0137	
30	Pilot valve kit	FW0341	
31	Valve disc seal (10pk)	FW0536	
32	Magnetic valve cover plate	FW0410	
33	Brass washer (10pk)	FW0537	
34	Magnetic valve	FW0350	
35	Mag valve seal (10pk)	FW0538	
36	Main gas housing	FW0151	
37	3/4" washer (10pk)	FW0539	070721
38	Gas filter (2pk)	FW0355	
39	Gas valve rod O-ring (10pk)	FW0540	
40	Gas valve push rod (5pk)	FW0360	
41	Push rod guide screw	FW0365	
43	Push rod & disc	FW0415	
47	Front cover hex nut	FW0427	
48	Lower cover plate	FW0435	

49	Water control assembly	FW0162	
50	Upper protector	FW0170	
51	Outlet union O-ring (10pk)	FW0595	070720
52	Diaphragm	FW0180	070711
53	Water regulator	FW0192	
54	Water reg spring (10pk)	FW0200	
55	Lower protector	FW0212	
56	Water assy outlet union	FW0221	
57	Water assy out union clip (5pk)	FW0564	
58	Water assy in union clip (5pk)	FW0563	
59	Water ctrl spindle O-ring (10pk)	FW0542	070722
60	Water control spindle	FW0231	
61	Water ctrl spindle extension	FW0240	
63	Inlet union O-ring (10pk)	FW0543	070723
64	Drain plug washer 8mm (10pk)	FW0597	070727
65	Drain plug	FW0251	070714
66	Water assy inlet union	FW0260	
67	Water filters (5pk)	FW0271	070716
68	Pilot bracket	FW0281	
69	Thermoc'ple locking nut (10pk)	FW0566	
70	Spark electrode	FW0291	
71	Thermoc'ple locking nut (10pk)	FW0566	
73	Pilot gas pipe	FW0311	
74	Pilot jet washer (10pk)	FW0545	070725
75	Pilot injector LPG	FW0321	
76	Pilot washer (10pk)	FW0545	070725
77	Pilot burner	FW0330	
80	Pilot burner kit		
	Includes 68, 69, 75, 76 & 77	FW0320	070719
86	Thermocouple complete	FW0302	070715
103	Roll pin (10pk)	FW0567	
104	Gas spindle spring (5pk)	FW0568	
108	Base	FW0057	
113	Fixing clamp	FW0496	
115	Heat exchanger left support	FW0500	
116	Heat exch spring clip	FW0512	
	Water pipe washer (10pk)	FW0547	070726
	Flue pipe & terminal	FTFTPG101	070710