

		Spare part number	Spare part number (kit)
1	Glass lid assembly	<i>Refer to page 4</i>	
2	Glass lid hinges (pair)	SSPA0010	
3	Lid shut-off assembly	SSPA0610	
4	Lid bump stops (pair)	SSPA0044	
5	Pan support (black enamel)	SSPA0952	
	Pan support (cast)	SSPA0951	
6	Pan support clips (6x)	SSPA0800	
	Pan support clips (50x-bulk pack)	SSPA0047	
7	Medium burner assembly (gloss cap)	SSPA0110	
	Medium burner assembly (matt cap)	SSPA0133	
8	Small burner assembly (gloss cap)	SSPA0811	
	Small burner assembly (matt cap)	SSPA0109	
9	Hob thermocouples		
	Front right	SSPA0688	
	Front left	SSPA0690	
	Back right	SSPA0689	
10	Back left (for 4 burner cooker)	SSPA0687	
	Hob spark electrodes (set of 4)	SSPA0327	
11	Spark generator	SSPA0300	SSPA0301
		(K1540 with hotplate)	(K1520-K1540 gas only)
12	Spark ignition switch	SSPA0383	
13A	Burner gas tap	SSPA0433	
13B	Oven gas tap and thermostat (K1520)	SSPA0447	
13C	Grill gas tap	SSPA0474	
14	Hotplate control switch <i>*if fitted</i>	SSPA0581	
15	Control knobs	<i>Refer to page 4</i>	
16	Grill door	<i>Refer to page 5</i>	
17	Grill door bump stops (pair)	SSPA0044	
18	Grill pan and handle		SSPA2500
	Trivet		
19	Grill burner		
20	Grill thermocouple	SSPA0650	SSPA0178
21	Grill spark electrode		
22A	Fan thermal switch (horizontal tabs)	SSPA0517	
22B	Fan thermal switch (vertical tabs)	SSPA0513	
23	Thermal switch (grill shut-off – horizontal tabs)	SSPA0518	
24	Cooling fan	SSPA0529	
25	Hotplate	SSPA0553	

**Not illustrated**

Fascia	<i>Contact Thetford</i>
Anti-rattle kit	SSPA0085

**K1520 Cooker - SCK4XXXX(Z) only**

 
27	Complete oven door	<i>Refer to pages 5&amp;6</i>	
28	Oven inner glass	SSPA0262	
29	Oven door seal	SSPA0066	
30	Oven shelf	SSPA0980	
31	Oven burner	SSPA0197	
32	Oven spark electrode		
33	Oven thermocouple		
34	Forced fan	SSPA0528	
35	Oven lamp <i>*if fitted</i>	SSPA0560	
36	Oven lamp switch	SSPA0590	

**Glass lid**



Spare part number	Glass	Print	Profile colour	Protective strip
SGL2115.BKX	Clear	Black	Black	No
SGL2115.BSX	Clear	Black	Stainless	No
SGL2117.BKX	Clear	Black	Black	No
SGL2118.BKX	Clear	Black	Black	Yes & Frame
SGL2119.BKX	Clear	Black	Black	Yes


**Control knobs**

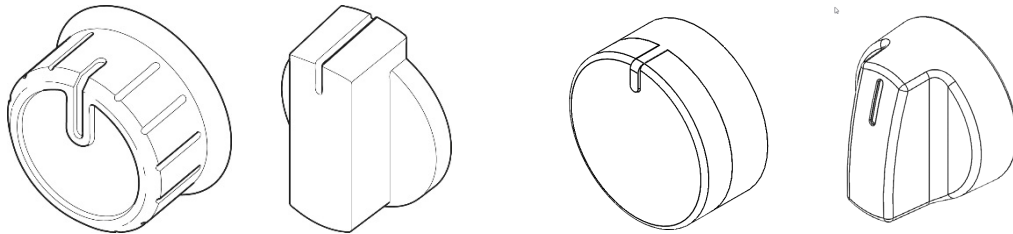


<b>Spare part number</b>	SSPA0900	SSPA0901	SSPA0933	SSPA0932
<b>Colour suffix</b>	Brushed-Nickel <b>.BNK</b> Black <b>.BK</b>	Matt Nickel <b>.MNK</b> Brushed-Nickel <b>.BNK</b> Chrome <b>.CR</b> Black <b>.BK</b>	Brushed-Nickel <b>.BNK</b> Chrome <b>.CR</b>	Chrome <b>.CR</b> Black <b>.BK</b>
<b>Set quantity</b>	6	6	6	6

**Grill Doors**

 **No cladding**




**Bottom cladding**

 


Spare part number	Glass	Print	Cladding	Cladding Position	Handle Style	Handle Colour
SMAO5060.BK01X	Clear	Black	No	N/A		Chrome
SMAO5060.BK02X	Clear	Black	No	N/A		Chrome
SMAO5060.BK03X	Clear	Black	No	N/A		Brushed Nickel
SMAO5060.BK04X	Clear	Black	No	N/A		Brushed Nickel
SMAO5060.BK05X	Clear	Black	No	N/A		Brushed Nickel
SMAO5060.BK06X	Clear	Black	No	N/A		Brushed Nickel
SMAO5060.BK07X	Clear	Black	No	N/A		Chrome
SMAO5060.BK08X	Clear	Black	No	N/A		Chrome
SMAO5060.BK09X	Clear	Black	No	N/A		Black

Oven doors

 Drop down oven doors

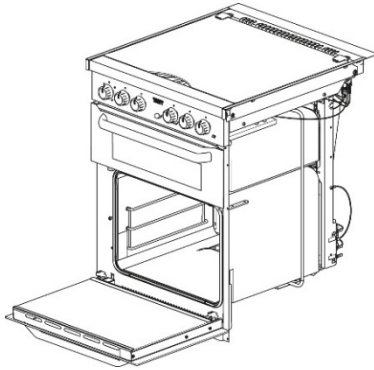

Left hinged oven doors

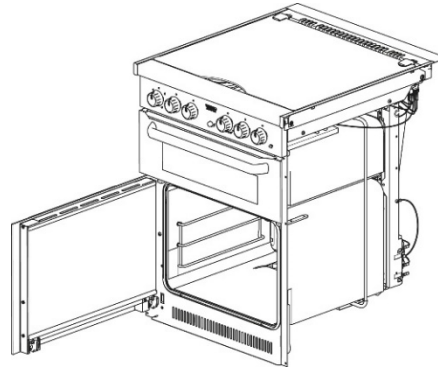 

Spare part number	Glass	Print	Cladding	Cladding position	Handle style	Handle colour
<b>Drop down</b>						
SMAO5080.BK01X	Clear	Black	No	N/A		Chrome
SMAO5080.BK02X	Clear	Black	No	N/A		Chrome
SMAO5080.BK03X	Clear	Black	No	N/A		Brushed Nickel
SMAO5080.BK04X	Clear	Black	No	N/A		Brushed Nickel
SMAO5080.BK05X	Clear	Black	No	N/A		Brushed Nickel
SMAO5080.BK06X	Clear	Black	No	N/A		Brushed Nickel
SMAO5080.BK07X	Clear	Black	No	N/A		Chrome
SMAO5080.BK09X	Clear	Black	No	N/A		Black
SMAO5082.BK01X	Clear	Black	Yes	Bottom		Chrome
<b>Left hinged</b>						
SMAO5081.BK08X	Clear	Black	No	N/A		Chrome
<b>Right hinged</b>						
SMAO5084.BK01X	Clear	Black	No	N/A		Chrome